


# PREMIER - 10 USERS ALARM INTERFACE

Use the alarm interface when lock has been setup with remote disable input and silent alarm options.

## Important notes:

- Alarm interface must be connected to lock BAT connector.
- 9V alkaline battery must be connected to alarm interface battery connector: this way power will be sent to all lock system components. If battery is not connected to the alarm interface alarm signals will not be active.

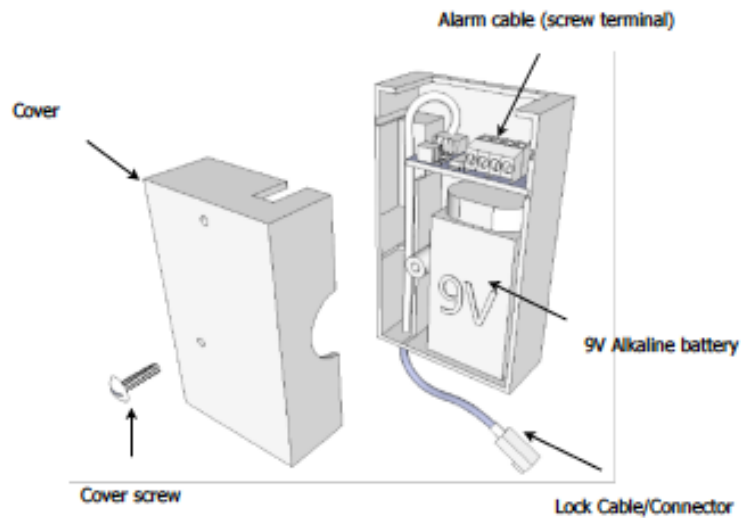

## Remote disable input

- Pin 1 and 2: remote disable input.
- Pin 1: positive. Pin 2: negative.
- Every time power supply is connected to pin 1 and 2 lock will be blocked.
- Input signal: 9-24VDC max 25mA.

## Slent alarm

- Pin 3 and 4: silent alarm output.
- Pin 3: normally closed output (NC). Pin 4: common.
- Maximum load: 50VDC, 100mA

