

LOCK-ONE TECHNICAL MANUAL

Default codes (change default codes)

Setup (Master)	5-0-5-0-5-0-5-0
Service	not installed
Manager	1-2-3-4-5-6
Users (1-9)	not installed



Open the lock

- Enter the code and open within 4 seconds.
- If time delay is set wait for counting: an acoustic signal indicates open window.
- Enter the code and open within 4 seconds.

Open the lock with time delay override

- Enter override user (9) code.
- Enter second code and open within 4 seconds.

If lock is already counting time delay enter override user (9) code to immediately open.

Change code (door open)

- Press and hold 0 until double beep: enter old code.
- Enter and confirm new code.

Install a user

- Press and hold 1 until double beep: enter Manager code.
- Enter user ID (1-9).
- Enter and confirm new user code.

To install Manager enter the function with Service code.

Users management

- Press and hold 2 until double beep: enter Manager code.
- Press P to scroll users list and check their status.
- Press 1 to install a user: enter and confirm user code.
- Press 2 to disable/enable a user.
- Press 3 to delete a user.
- Press OK to confirm and exit.

Delete a user

- Press and hold 3 until double beep: enter Manager code.
- Enter user ID (1-9).

To delete Manager enter the function with Service code.

Test function

- Press and hold 5 until double beep.
- Enter the sequence: 1-2-3-4-5-6-7-8-9-0.
- Double beep: key properly working. Long beep: key malfunction.

 
If lock and keypad don't communicate display shows the message: NO ANSWER.

Audit

- Press and hold 7 until double beep and enter Manager code or access Setup menu and press 7.
- Display shows last opening/closing operation.
- Press 1 to check next event, press 0 to check previous event.
- Press OK to exit.

CODE
o o o o o o

OPEN
LOCK



CHANGE
o o o o o o

INSTALL
o o o o o o

+ ID= 1

⌚ ID= 2

✕ ID= 3

DELETE
o o o o o o

TEST

ID=1 16:30
16/07/17

ID= 16:31
16/07/17

Change Setup code (Master)

- Press and hold 8 until double beep, enter Setup code and select function 0.
- Enter and confirm new Setup code.

FUNCTION
0 1 3 5 6 7 9

Install Service

- Press and hold 8 until double beep, enter Setup code and select function 1.
- Press OK to confirm the operation.
- Enter and confirm new Service code.

FUNCTION
0 1 3 5 6 7 9

Delete Service

- Press and hold 8 until double beep, enter Setup code and select function 3.
- Press OK to confirm the operation.

FUNCTION
0 1 3 5 6 7 9

Reset lock

- Press and hold 8 until double beep, enter Setup code and select function 5.
- Display shows the message RESET.
- Press OK to confirm the operation.
- Enter a valid code.
- Lock is in pre-setup mode.

FUNCTION
0 1 3 5 6 7 9

RESET

Pre-setup mode

- To open press 1.
- Setup code (Master) 5-5-5-5-5-5-5.

Lock setup

- Press and hold 8 until double beep. Enter the code 5-5-5-5-5-5-5.
- Display shows the following options (press P to scroll):
 - CHANGE: change Setup code to exit pre-setup mode.
 - DATE TIME: set time and date before lock setup.
 - SETUP: check (OK) or change (P) lock configuration (**bold** = default settings)
 - **DELAY DOWN** - DELAY UP: time delay counting up or down.
 - **DUAL NO** - DUAL YES: dual mode active - dual mode not active.
 - **LOCKOUT MANAGER** - LOCKOUT ALL: lockout set by Manager only or any valid code.
 - **DATE DD/MM** - DATE MM/DD: date format European/American.
 - **DIGITS 6** - DIGITS 7 - DIGITS 8: opening codes length.

Date and time (check time at least once a year)

- Press and hold 8 until double beep, enter Setup code and select function 6 or press and hold 6 until double beep and enter Service code.
- Display shows date and time menu: press OK.
- Display shows current time: enter hh:mm:ss and press OK.
- Display shows current date: enter dd/mm/yy and press OK.

FUNCTION
0 1 3 5 6 7 9

DATE
TIME

Check time and date

- Press and hold OK until double beep: display shows the current language.
- Press P: display shows serial number and firmware version.
- Press P: display shows set time and date.

11:40
11/12/18

Set time lock

Make sure time and date have been properly set before setting time lock.

- Press and hold 8 until double beep, enter Setup code and select function 6 or press and hold 6 until double beep and enter Service code: display shows date and time menu.
- Press P: display shows time lock menu.

FUNCTION
0 1 3 5 6 7 9

TIME LOCK

- Press OK: display shows current time lock settings or the message CHANGE?
- Press P to scroll the list or press OK to set time lock.
- Press P to scroll the following list until the desired option:
Mon-Fri / Mon-Sun / Sat-Sun / Mon / Tue / Wed / Thu / Fri / Sat / Sun
- Press OK.
- Enter opening time (ex. 09:00) and closing time (ex. 18:30).
- Press Ok to confirm or press P to delete.
- Display shows the message SAVE? Press OK to save (time lock is now active) or P to delete.
- Display shows the message QUIT? Press OK to exit or P to stay in time menu.

CHANGE?

MON-FRI?

MON-FRI
09:00 18:30?

SAVE?

QUIT?

Delete time lock

To delete a time period, install a new period with a duration of zero minutes within the existing one.

Ex. 1: to delete a time period Monday-Friday from 08:00 to 18:00 set a new time period Monday-Friday from 09:00 to 09:00).

Ex. 2: to delete a time period Saturday from 14:00 to 18:00 set a new time period Saturday from 17:00 to 17:00).

MON-FRI
09:00 09:00

SAT
17:00 17:00

Time delay

- Press and hold 9 until double beep and enter Manager code (or Service code) or access Setup menu and press 9.
- Display shows current time delay values: press OK to confirm or enter new values (00-99min) and press OK.
- Display shows current open window values: press OK to confirm or enter new values (01-19min) and press OK.

Time delay can be increased at any moment, decreased only during open window.

DELAY
o o o o o o

DELAY
05min?

WINDOW
02min?

Change language

- Press and hold OK until double beep: display shows the current language.
- Press OK until the desired language will be selected.

ENGLISH
ITALIAN?

Check firmware version

- Press and hold OK until double beep: display shows the current language.
- Press P: display shows serial number and firmware version.

42C1AH90
VER. 01.01

Immediate lockout

- Press and hold P until double beep.
- Display shows immediate lockout menu.
- Enter number of hours and minutes you want the lock to be blocked (max 72h59m).
- Press OK to confirm or P to exit.
- Enter a valid code to confirm the operation.
- Display shows next opening time.
- Press OK to confirm or P to exit.

BLOCK
_ _ h _ _ m

CONFIRM
00 h 30 m

15:35
16/09/17?