

PREMIER - 2 USERS TECHNICAL MANUAL



General information

Manager factory code 1-2-3-4-5-6.

A valid entry is followed by a double signal.

An invalid entry is followed by a long signal.

After 5 seconds without entry, current operation will be cancelled.

Penalty

After entry of 4 consecutive invalid codes the lock will be blocked for 5 minutes (penalty).

During penalty the LED flashes every 10 seconds.

During penalty any key pressed causes a long signal.

After penalty, entry of 2 more invalid codes restarts the 5 minutes blocking period.

Low battery signal

A series of signals indicates that the battery is weak and must be replaced.

Only use brand new 9V ALKALINE batteries.

Open the lock

- Enter the code (double signal).
- If time delay has not been set open the lock within 4 seconds.
- If time delay has been set wait for time delay counting: LED flashes every 2 seconds.
- A signal every 2 seconds indicates time delay counting is over and open window started.
- Enter the code (double signal) and open the lock within 4 seconds.

Change code (only change the code with safe door open).

- Press and hold 0 until double signal.
- Enter current user code (double signal).
- Enter new code (double signal) and repeat new code to confirm (double signal).
- Code has been changed: try new code with door open.

In case of any error (long signal) the old code remains valid.

Safety reference:

All codes are to be securely stored.

Do not use personal data (i.e. birthdays, phone numbers, etc.).

Change factory code before you start using the safe.

Install the user

- Press and hold 1 until double signal.
- Enter Manager code (double signal).
- Enter new user code (double signal) and repeat new code to confirm (double signal).
- User code has been installed: try new code with door open.

In case of any error (long signal) user code has not been installed.

Delete the user

- Press and hold 3 until double signal.
- Enter Manager code (double signal).
- User code has been deleted.

Self diagnostic

- Press and hold 5 until double signal.
- Press each key consecutively 1-2-3-4-5-6-7-8-9-0
- Double signal: key properly working.
- Long signal: damaged key.

If no acoustic signal is emitted after pressing and holding 5, the lock is not properly connected to the keypad or the cable is damaged.

Time delay

- Press and hold 9 until double signal.
- Enter Manager code (double signal).
- Enter time delay and open window values.
 - Example: 0205 to set 2 minutes time delay and 5 minutes open window.
- Confirm time delay and open window values.
 - Example: 0205 to set 2 minutes time delay and 5 minutes open window.

Important notes:

Time delay accepted values: 00-99min.

Open window accepted values: 01-19min.

Time delay can be increased at any moment, can be decreased only during open window.

To delete time delay set 0001 and confirm 0001.